Automatic Door Systems



OPERATION INSTRUCTION


APPENDIX(2) REMOTE CONTROL (Optional Device)



(C) Operation:

- 1 · ARROW UP(▲): Open door for 1 cycle and auto close back again. Good for controlling eople from coming in after office hours when put to LOCK mode.
- 2 · ARROW DOWN(♥): Door in fully open position. Press another time it will go back to normal function.
- 3 · SQUARE(■): Door permanently close or lock by electric lock. Press another time door is unlocked and go back to normal operation. Cannot be activated by sensor or press button. If using card access security system, has to put to LOCK mode. Coming in by card access system, going out by sensor or release press button.
- 4 · ROUND(●): Door opens partially. Press another time and door goes back to normal operation and door can open fully.

Connection of Illustrations

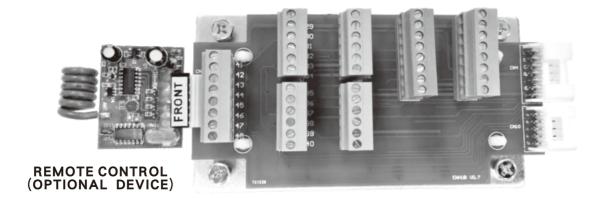


COMBINED TERMINAL BLOCK



ROUND TYPE DOOR / CURVED TYPE DOOR $\stackrel{oldsymbol{2}}{st}$


Our company has the following series of automatic door, please contact with our distributors/representations.

Round type door

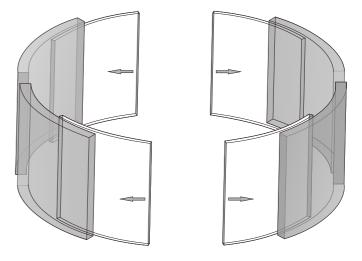

Installation: Please in accordance with the instruction of Round Type Door.



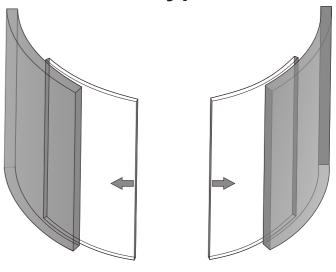


Installation: Please in accordance with the instruction of Curved Type Door.

TELESCOPIC SLIDING DOORS




Telescopic 4-winged Sliding Doors.

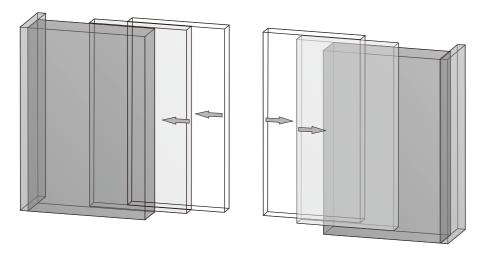

Installation: Please in accordance with the instruction of Telescopic 4-winged Sliding Doors.

Telescopic 2-winged Sliding Doors.

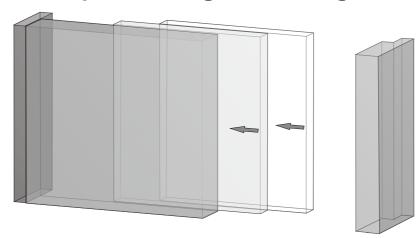

Installation: Please in accordance with the instruction of Telescopic 2-winged Sliding Doors.

9 APPENDIX(2) REMOTE CONTROL (Optional Device)



(A) Action Instruction:

1 · Add another Transmitters:

Make sure Receiver power on and take one Transmitter which can control Receiver. Press the ● and ■ of Transmitter simultaneously and Indicator flash quickly about 9 seconds. When press ▲ and ▼ of new Transmitter simultaneously during flash, the Indicator will stop flash and add new Transmitter. The memory capacity of Receiver is "30 pieces" of Transmitter.

Note: Follow the instruction again to add another Transmitter Transmitter

2 · Clearance other Transmitter:

Turn off the power for 10 seconds then turn on the power again. The Indicator will flash per second about 10 seconds. Then press four keys(\bigcirc , \blacksquare , \triangle , \blacktriangledown) of Sample Transmitter at the same time during flash and the Indicator will stop flash. After that, the Receiver will copy new code and remove the old code. All Transmitters couldn't control Receiver except the Sample Transmitter.

Note: Follow theinstruction again to add another Transmitter.

3 Stand by condition:

When the Receiver power on, the action Indicator will flash for 10 seconds. While press any key of Transmitter during flash, the Indicator will stop and enter stand by condition. If there are no input by pressing any key of Transmitter during flash, the Receiver will automatically enter stand by condition after 10 seconds.

4 · Memory function of the lock: after power on, the receiver keeps the original condition of lock.

(1) If the lock is ON before the receiver powers off, it will be ON after the power on.

(2) If the lock is OFF before the receiver powers off, it will be OFF after the power on.

(B) Technical data:

1 · Transmitter:

Power supply: GP 23A (12V) Frequency: 433.92Mhz

Power consumption during operation: About 9mA (12V)

Stand by power consumption: 1uA Transmit power: About - 15dbm


2 · Receiver:

Power supply: DC 7V - DC 14V(Standard: DC 12V)

Frequency: 433.92Mhz

Stand by power consumption: About 6mA(12V)

Max output: 30mA

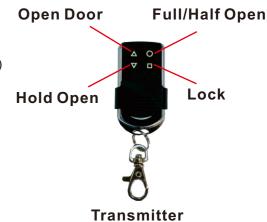



18 APPENDIX(1) FUNCTION SWITCH (Optional Device)



FUNCTION SWITCH




Six press functions:

- 1.DOOR OPEN
- 2.IN ONE-WAY
- 3.AUTO
- 4.OUT ONE-WAY
- 5.DOOR CLOSE
- 6.HALF OPEN

Operation

Press for 3 seconds to unlock buttons. When light flash, choose the needed functions. After 5 seconds, the light keeps go to finish setting.

MICRO-CONTROLLER

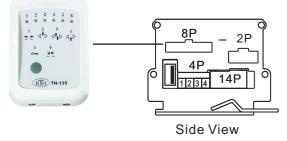



Front View

Accessory Cable Notice:





TO MICRO-CONTROLLER

$\sqrt{23}$

TABLE OF CONTENTS

2
8

1.	COMPONENTS SPECIFICATION	P1
2.	LEGEND OF PART DRAWING	P2
3.	TECHNICAL SPECIFICATION	P3
4.	SECTIONAL DRAWING	P4
5.	INSTALLATION DRAWING	P5
6.	SAFETY DEVICE	P6
7.	INSTALL PROCEDURE	P7
8.	INSTALL THE BELT ROLLER & THE POSITION OF THE HANGING TWIN-WHEEL	P8
9.	INSTALL THE RACK BELT & ADJUST THE DOOR-LEA	FP9
10.	CONNECTION (Electric)	P10
11.	CONNECT (Combined Terminal Block)	P11
12.	CONNECT (Others)	P12
13.	CONNECT (non monitored sensor)	
	CONNECT (monitored sensor1)	
	CONNECT (monitored sensor2)	P15
14.	TEST AND ADJUST - 1	P16
	TEST AND ADJUST - 2	
15.	BROKEN CHECKING	P18
16.	TROUBLESHOOTING	P19
17.	TROUBLESHOOTING(ILLUSTRATED)	P20
18.	APPENDIX(1) FUNCTION SWITCH(Optional Device)	P23
19.	APPENDIX(2) REMOTE CONTROL(Optional Device)	P24

COMPONENTS SPECIFICATION



TROUBLESHOOTING (ILLUSTRATED)







WORM GEAR MOTOR



POWER SWITCH



SENSORS (OPTIONAL DEVICE)



BELT ROLLER

COMBINED TERMINAL BLOCK

(BI-PARTING)HANGERS & IRON PARTS



HANGING TWIN-WHEEL4 PCS



PASSIVE BRACE with BELT FIXER



ACTIVE BRACE with BELT FIXER

RACK BELT



HANGING BRACE-4 PCS







BLOCK SCREW-8 PCS








SCREW-8 PCS

DOOR SCREW-8 PCS

IRON PARTS SACK





The Door-Leaf sends out abnormal noise in operating. Cause 1 Cause 2 Cause 3

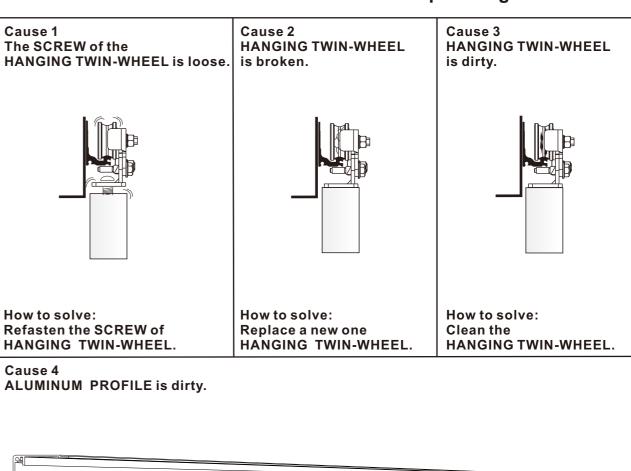


How to solve: Clean the ALUMINUM PROFILE.

Door-Leaf isn't smooth in operating.

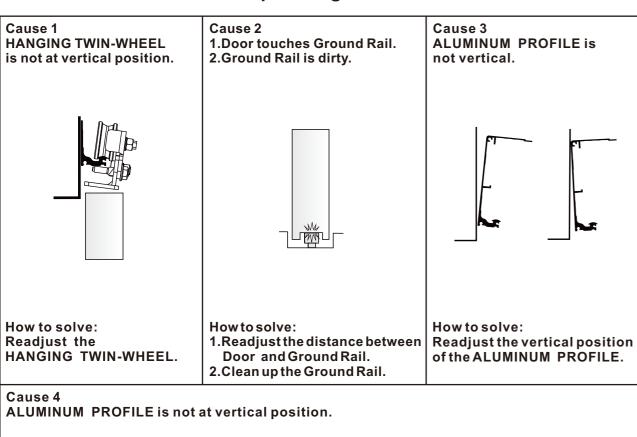

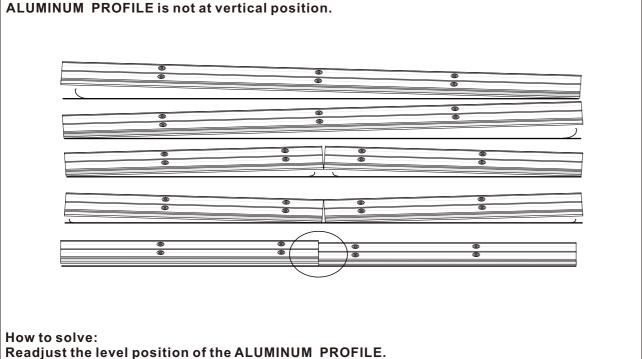

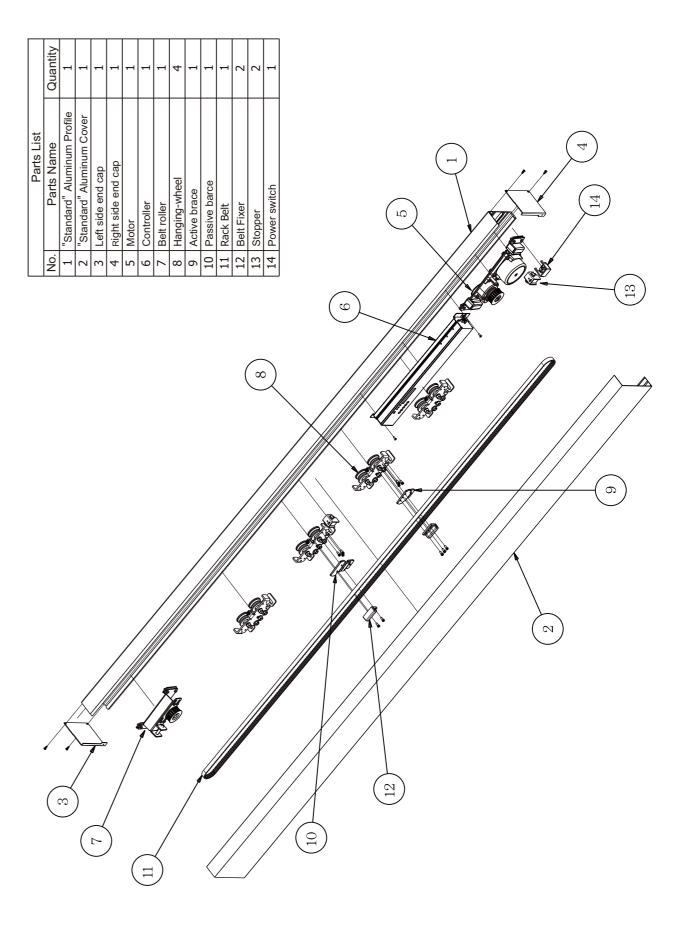

TECHNICAL SPECIFICATION

2	
Z	


TROUBLESHOOTING (ILLUSTRATED)

Door can't be opened or closed.

Cause 1 Above the Door-Leaf touched with the crossbeam.	Cause 2 The Door-Leaf touched with the Ground Guide Rail.	Cause 3 Door-Leaf derails the ALUMINUM PROFILE.
Crossbeam		
How to solve: Adjustment the interval between the Door-Leaf height and Crossbeam.	How to solve: Adjus the Door-Leaf height.	How to solve: Put the Door-Leaf into the ALUMINUM PROFILE again.
Cause 4 Door-leaf is not vertical.	Cause 5 SENSOR is broken or disconnects to th	e COMBINED TERMINAL BLOCK.
	44	
How to solve: Adjust the Ground Guide Rail/Wheel position.	How to solve: 1.If SENSOR is broken please a contract of the c	onnects to the


SINGLE-WINGED	BI-PARTING		
150kg X1(door)	130kg X2(door)		
DW=500mm~2500mm	DW=500mm~2500mm		
Surface install	Surface install		
DC24V 75W WOR	M GEAR MOTOR		
STANDARD MICE	RO-CONTROLLER		
75W			
AC100\	AC100V~240V		
-20℃~+50℃			
60decib	el(max.)		
600 mm (second)	550 mm x 2 / (second)		
0~64 sec. (regularly)			
RACK BELT S8M			
FULL/HALF-OPEN (regularly)			
0.95(in AC100V Full load)			
3kg			
	150kg X1(door) DW=500mm~2500mm Surface install DC24V 75W WOR STANDARD MICE 75 AC100V -20°C~ 60decib 600 mm (second) 0~64 sec. RACK BE FULL/HALF-OF 0.95(in AC10		


PROBLEMS	REASONABLE	CHECK	HOW TO SOLVE	
DOOR CAN'T BE MOVED.	1.No power.	Broken circuit.	Check the broken circuit position.	
		The Power Switch is not opened.	Open the POWER SWITCH.	
	2.The door is locked.	Door is locked and no movement action.	Open the DOOR LOCK.	
	3.The sensor is broken.	Signal light is WORKING.	Check the MICRO-CONTROLLER.	
		Signal light is OUT OF WORKING.	Check the CIRCUIT OF SENSOR or change a new one SENSOR.	
SPEED	1.Speed is too slow.	Check the Speed at KNOB of MICRO-CONTROLLER.	Adjust the Speed of Open/Closed Door.	
	2.Door runs into the obstructor, then cause the Door moving slow.	Installation problem or dirty.	Reinstall or clean the ALUMINUM PROFILE.	
	3.Door is difficult to move.	Turn off the power. Use hand to move the Door, besides, check the Ground Guide Rail whether it is dirty.	Clean the Ground Guide Rail.	
		Check the HANGING TWIN-WHEEL whether it is broken.	Change a new one.	
		Check the Door Bolt in the door bottom whether it is loosen.	Fix the Door Bolt.	
		Check whether the Ground Wheel is broken.	Change a new Ground wheel.	
DOOR CAN'T FULL OPEN.	In the Half-Open way.	Check the Knob/Switch.	Turn on to Full Open.	
DOOR CAN'T CLOSE.	1.In the Full-Open way.	The SENSOR keeps working.	Check wiring or change a new SENSOR.	
	2.The Door opens suddenly while it is moving to close.	The SENSOR probably is installed with something wrong.	Adjust the SENSOR or change a new one.	

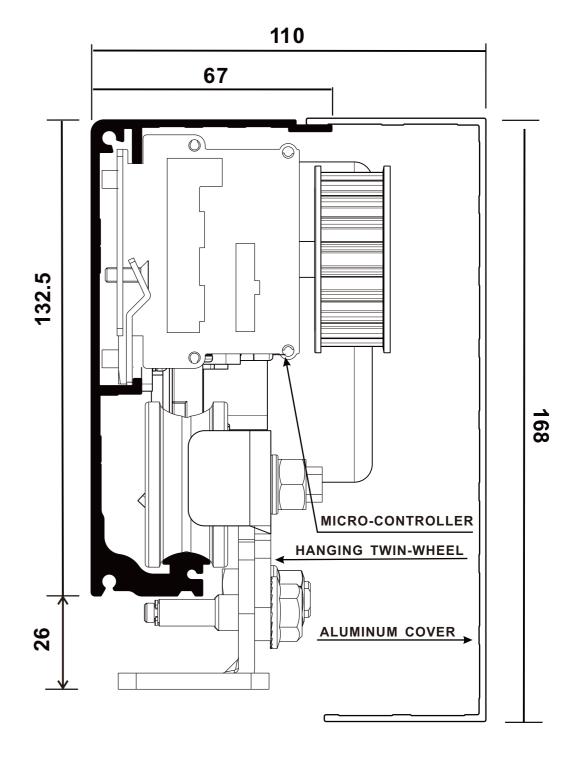

MEASURE: mm



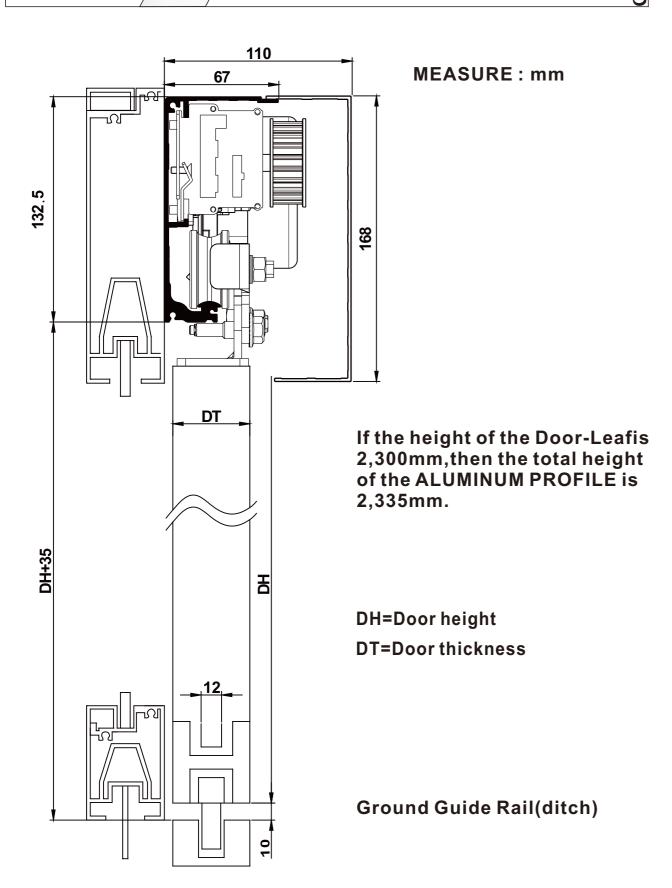

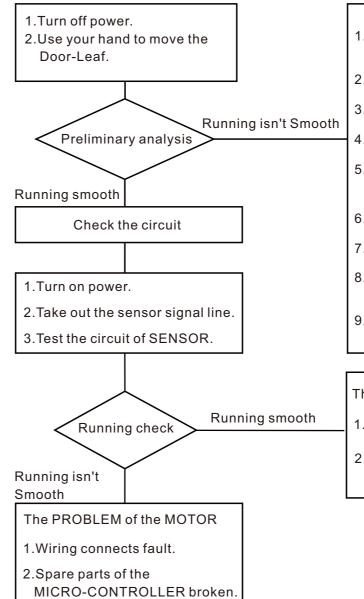

- Check the distance between Door and Wall / Crossbeam.
- 2. HANGING TWIN-WHEEL is broken.
- 3. The GROUND RAIL is dirty.
- 4. The Door-Leaf becomes deformed.
- Check BLOCK SCREW whether need to adjust.
- 6. The GROUND GUIDE WHEEL is damaged.
- 7. Check the LOCK whether it is broken.
- 8. Check the ALUMINUM COVER whether it isn't fixed.
- 9. There is dirt inside the ALUMINUM PROFILE.

The PROBLEM of the SENSOR

- 1. Check the SENSOR whether it is broken.
- 2. Check the SENSOR whether the wire is broken or short circuit.

The Slowing Range of Opening and Closing Door is controlled by "Fingered Switch". There are two kinds of choice: SHORT and LONG range. (The setting of production is SHORT ange).

Switch I 1 Directional function OFF ON OFF: Normal mode. ON: Push once, open the door. Push again, close the door. Push again, close the door. In order to control opening and closing Switch I 3 Electric lock switch Fail Safe Fail Secure 4 ~ 8 Standby


OFF ON

OFF: Normal mode, after power resumes, the Door-Leaf opens the door first.

ON: suitable for Security System, after power resumes the Door-Leaf closes the door first.

direction of the Door-Leaf after power


resumes.

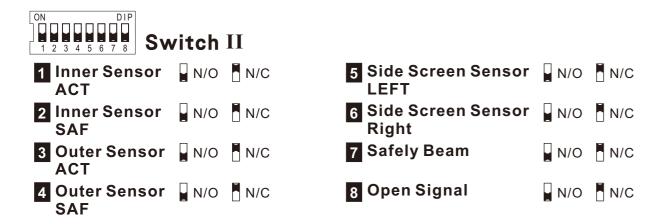



Fyi. (4)-(7) are for the function of Monitored Sensor.



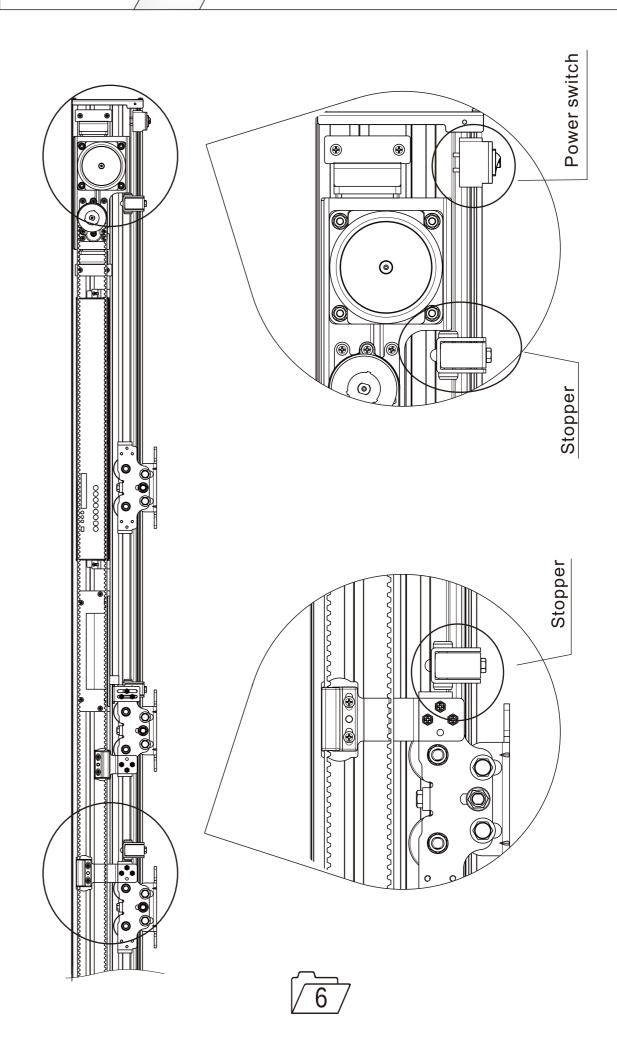

Should correct the height Prepare and the leveling of the **ALUMINUM PROFILE**

Cut and install the **ALUMINUM PROFILE**

Install the SENSORS

MOTOR

MICRO-CONTROLLER

6 Install the BELT ROLLER

3

Hang and adjust the Door-Leaf

Install and adjust the BELT

Power connect

Test and adjust

TEST AND ADJUST - 1




Before turn on the power, make sure the Door-Leaf can be smoothly moved, and the electric link is correct at first.

1.SYSTEM PROGRAM REMEMBER

After turn on the power, the MICRO-CONTROLLER will remember the distance and the range.

2.ADJUST

The FACEPLATE of MICRO-CONTROLLER

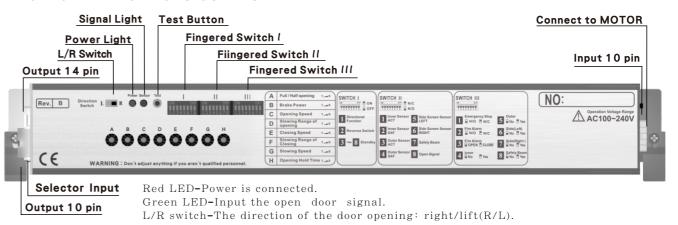

When USER regulates the Speed the Range and the Brake; it will start to accord what USER sets after twice running.



A Hull/Hait opening
Adjust the RANGE of the HALF OPEN DISTANCE. Higher number, wider range.

Brake power

The Door-Leaf is slight, the BRAKE POWER is less. Please choose 0~2 if the Door-Leaf is under 50kg. Please adjust number from number 5 if the Door-Leaf is over 80kg.

The opening speed of the door Adjust the OPEN SPEED. Higher number, faster speed.

CAUTION: please adjust the number one by one from low to high.

The slowing range of opening door Adjust the SLOW RANGE of OPENING DOOR Higher number, more range about the slow range at open door position. CAUTION: please adjust the number one by one from high to low.

The closing speed of the door Adjust the CLOSED SPEED. Higher number, faster speed. CAUTION: please adjust the number one by one from low to high.

The slowing range of closing door Adjust the SLOW RANGE of CLOSED DOOR Higher number, more range about the slow range at open door position. CAUTION: please adjust the number one by one from high to low.

The slowing speed of the door Adjust the SLOW SPEED. Higher number, faster speed. CAUTION: please adjust the number one by one from low to high.

Opening hold time Adjust the HOLD OPEN TIME. Higher number, the hold time is longer.

NUMBER	0	1	2	3	4	5	6	7	8	9	
SECOND	0	1	2	3	4	5	6	10	32	64	






CONNECTION (Monitored sensor - 2)

CN8 Inner Sensor	1 2 3 4 5 6 7 8	TEST- TEST+ COM ACT COM SAF 0V 24V	BROWN ————————————————————————————————————	TEST- TEST+ COM ACT COM SAF OV 24V	EN_HR100-CT (INNER)	100-CT
CN7 Outer Sensor	9 10 11 12 13 14 15 16	TEST- TEST+ COM ACT COM SAF 0V 24V	BROWN GRAY GREEN WHITE BLUE YELLOW BLACK RED	TEST- TEST+ COM ACT COM SAF OV 24V	EN_HR100-CT (OUTER)	🕶
CN6 Side Sensor LEFT	17 18 19 20 21 22	TEST- TEST+ COM SIDE 0V 24V	BROWN ————————————————————————————————————	TEST- TEST+ COM SIDE OV 24V	HR94D1-C1 (SIDE SCREEN) LEFT HAND	HR94D1-C1 HR94D1-C1 EN_HI No.6 → "N.C." No.6 → "N.C." Y-No.2 No.8 → "ON" No.8 → "ON" Y-No.4 Controller Controller Cortion II-No.6 → M.C." II-No.5 → M.C." II-No.4 *Please select the correct "N.C./N.O. position" for "Fingered Switch II" of
CN5 Side Sensor RIGHT	23 24 25 26 27 28	TEST- TEST+ COM SIDE 0V 24V	BROWN	TEST- TEST+ COM SIDE OV - 24V	HR94D1-C1 (SIDE SCREEN) RIGHT HAND	HR94D1-C1 No.6 — " N.C." No.8 — " ON " Controller II-No.6 — M.C."
CN3 SAFE Sensor	29 30 31 32 33 34	TEST- TEST+ COM SAFE 0V 24V		COM SAFE OV 24V	SAFE SENSOR	*Please select the c


INSTALL THE BELT ROLLER & 2 THE POSITION OF THE HANGING TWIN-WHEEL &

INSTALL THE BELT ROLLER

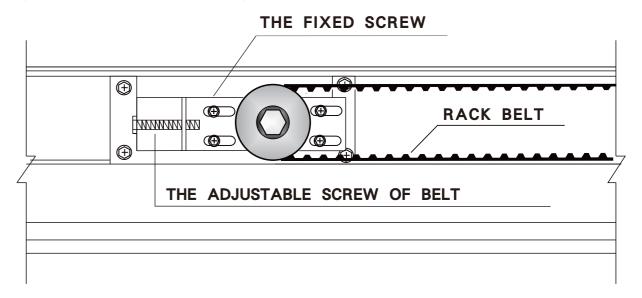


TENSION of BELT can be adjusted by the ADJUSTABLE SCREWof BELT, after that, must tighten the FIXED SCREW of BELT.

THE POSITION OF THE HANGING TWIN-WHEEL

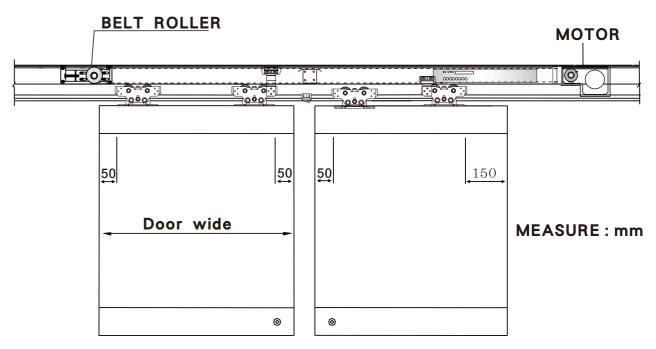


Inside the room, the distance between the HANGING TWIN-WHEEL and the RIM of DOOR must be more than 50mm.


INSTALL THE RACK BELT

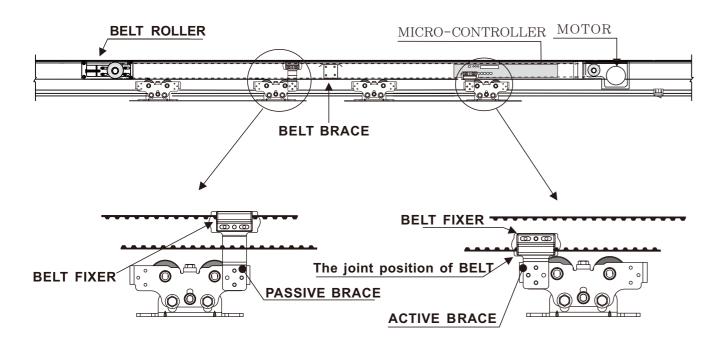


ADJUST THE DOOR-LEAF

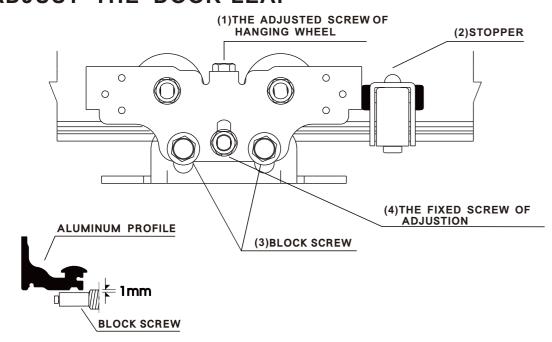


- (A) When Door-Leaf height and interval need to adjust, loose (3) & (4) at first, then adjust (1).
- B Need to fasten (3) & (4) after adjust (1).
- (2) Install above-mentioned (2) after make sure the DOOR OPEN POSITION.

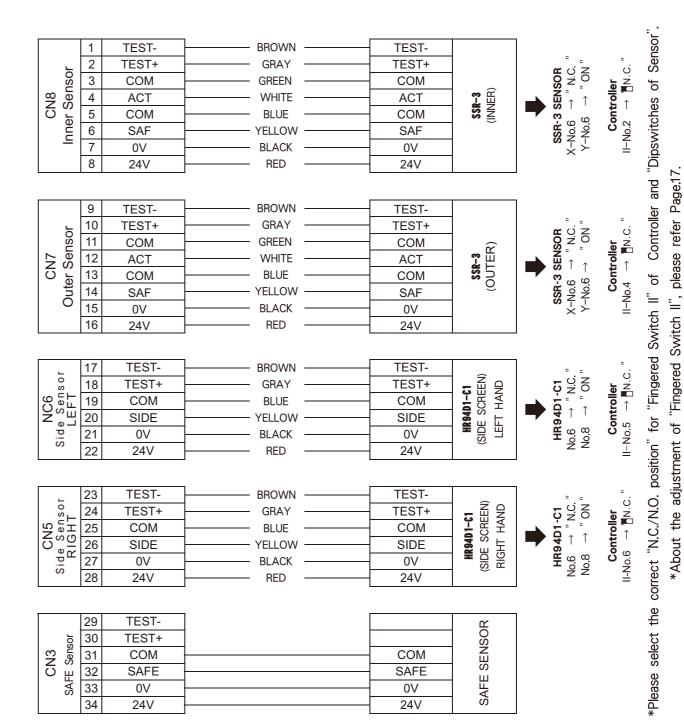

ELECTRIC CONNECTION

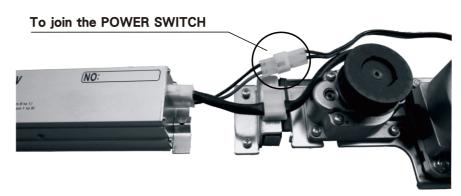


The ILLUSTRATED of CONTROLLER and MOTOR.

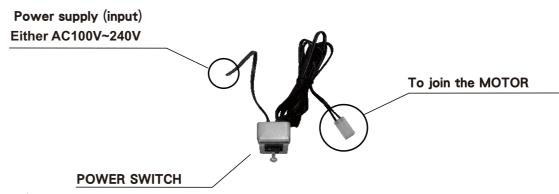


Please confirm WHETHER the SENSOR VOLTAGE is the same as the power supply. If different between them, need to add the TRANSFORMER, otherwise the SENSOR would be burned.

POWER SWITCH

It can be installed at the MIDDLE of the ALUMINUM PROFILE or the SIDE.

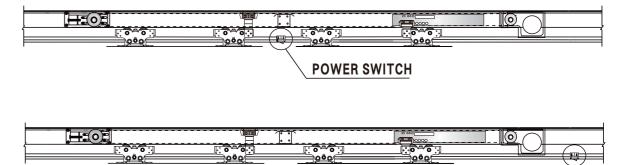

POWER SWITCH

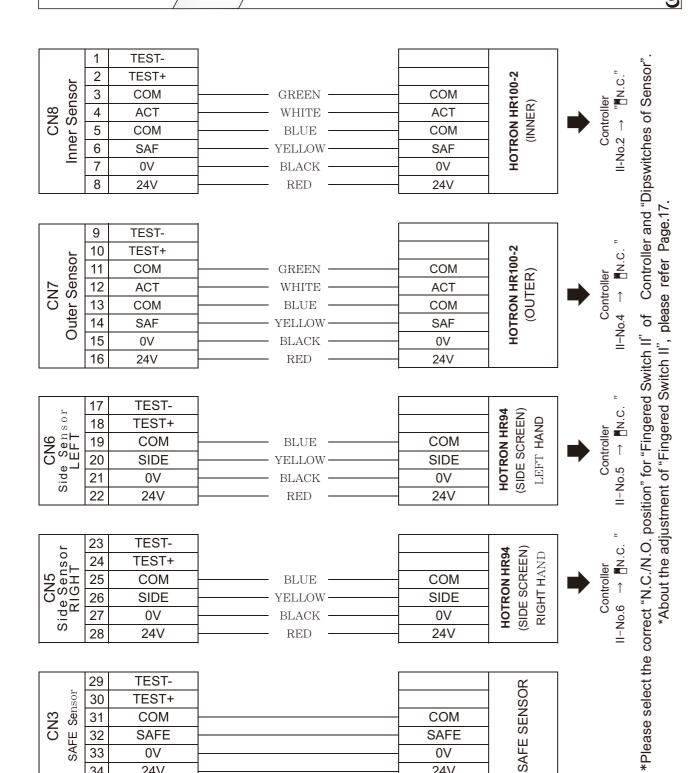

0V

24V

0V

24V

34

The ILLUSTRATED of WIRING.




COMBINED TERMINAL BLOCK




COMBINED TERMINAL BLOCK

MICRO-CONTROLLER

Wiring diagram

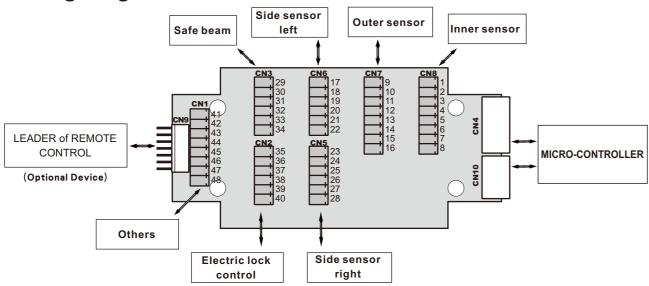

- (A) No.39 and No.40 of Terminal block CN2 are for ELECTRONIC LOCK enable; No.35 provides power +12V; No. 36 provides N.O. (Normal Open) contact; No. 37 provides N.C. (Normal Close) contact. Only when No.38 and No.39 short circuit No.36 and No.37 will have functions.
- (B) The SIGNAL of the SAFETY BEAM is controlled by CN3 terminal block. When door is opening and running, CN3 terminal block keeps receiving the signal, then the SAFETY BEAM will be working. CN3 terminal block WILL NOT work when the door is closed, then the SAFETY BEAM will lose efficacy when the door is closed.
- (C) The signal of Side Screen Safety Sensor is controlled by CN5 and CN6. Side Screen Safety Sensors are placed at the rear end of the door to prevent collisions during the opening movement of the moving leaves. When the signal activates, the moving leaves will become slowly, till the door opens fully, then close with normally speed.

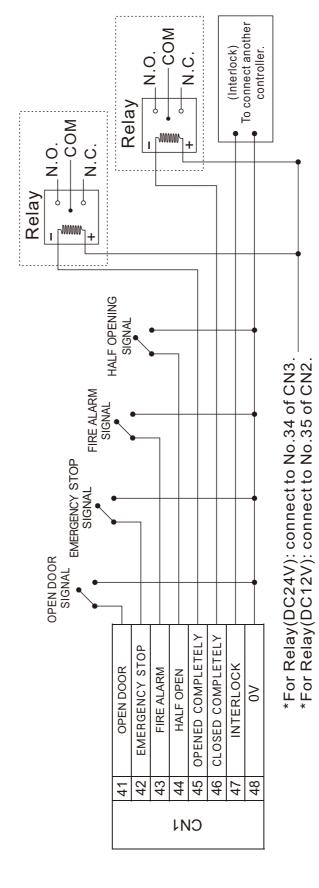

Warning 'Relay it should be with built in diode. 'Relay Suggested model: OMRON MY2N-J-D2-J (It's arranged by customers)

