
Automatic Door Systems

AD-W2 TELESCOPIC DOOR

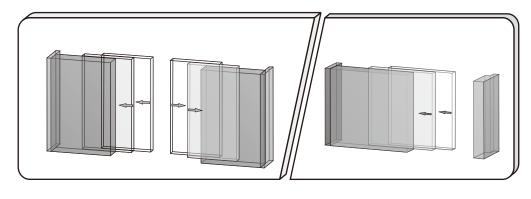

Telescopic 4-winged Sliding doors


Telescopic 2-winged Sliding doors

OPERATION INSTRUCTION

TROUBLESHOOTING

200


The Door-Leaf sends out abnormal noise in operating.

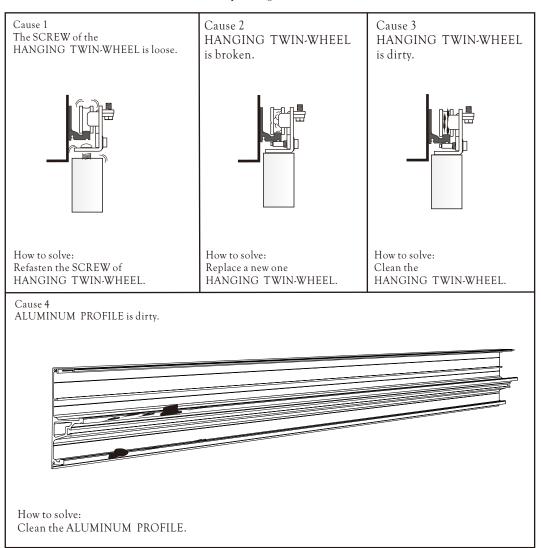




Our company has the following series of automatic door, please contact with our distributors/representations.

Round type door

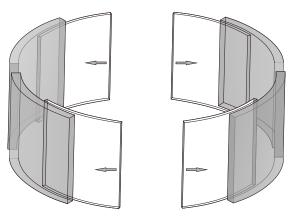

Installation: Please in accordance with the instruction of Round Type Door.


Curved type door

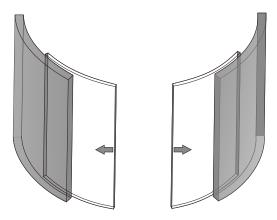

Installation: Please in accordance with the instruction of Curved Type Door.


Our company has the following series of automatic door, please contact with our distributors/representations.

SINGLE-WINGED

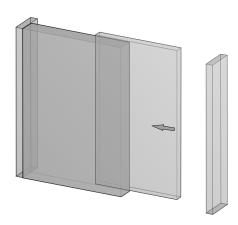


Installation: Please in accordance with the instruction of Sliding Door.


BI-PARTING

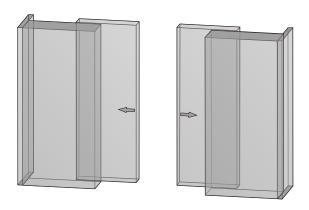

Installation: Please in accordance with the instruction of Sliding Door.

Door-Leaf isn't smooth in operating.

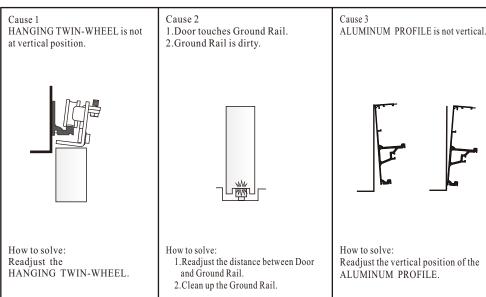

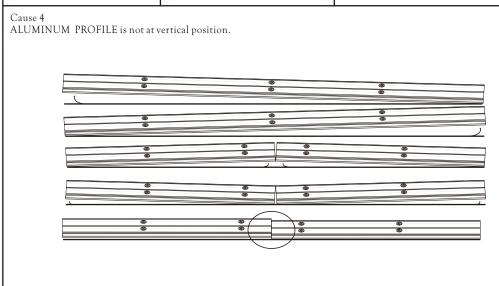



Readjust the level position of the ALUMINUM PROFILE.

Door can't be opened or closed.

How to solve:

Adjust the Ground Guide

Rail/Wheel position.

Cause 1 Cause 2 Cause 3 Above the Door-Leaf touched The Door-Leaf touched with the Door-Leaf derails the with the crossbeam. Ground Guide Rail. ALUMINUM PROFILE. Crossbeam How to solve: How to solve: How to solve: Adjustment the interval between the Adjus the Door-Leaf height. Put the Door-Leaf into the Door-Leaf height and Crossbeam. ALUMINUM PROFILE again. Cause 4 Cause 5 Door-leaf does not vertical. SENSOR is broken or disconnects to the COMBINED TERMINAL BLOCK.

1.COMPONENTS SPECIFICATION	P1
2.TECHNICAL SPECIFICATION	P2
3.SECTIONAL DRAWING	P3
4.INSTALLATION DRAWING	P4
5.INSTALL PROCEDURE	P5
6.INSTALL THE BELT ROLLER	P6
7.THE POSITION OF THE HANGING TWIN-WHEEL	P7
8.INSTALL THE RACK BELT OF 2-WINGED	P8
9.INSTALL THE RACK BELT OF 4-WINGED	P9
10.ADJUST THE DOOR-LEAF	P10
11.CONNECTION	P11
12.CONNECTION(OPTIONAL DEVICE)	P12
13.TEST AND ADJUST	P14
14.ADJUSTMENT	P15
15.BROKEN CHECKING	P17
16.TROUBLESHOOTING	P18
17.TROUBLESHOOTING(ILLUSTRATED)	P19



1.If SENSOR is broken please change a new one.

2. Check SENSOR whether it connects to the COMBINED TERMINAL BLOCK.

How to solve:

COMPONENTS SPECIFICATION 8









WORM GEAR MOTOR

RACK BELT







DOOR SCREWS (8 pcs 2-winged) (16 pcs 4-winged)

SCREWS of ACTIVE (3 pcs 2-winged) /PASSIVE BRACE (7 pcs 4-winged)

BLOCK (8 pcs 2-winged) SCREWS (16 pcs 4-winged)









STOPER (2 pcs 2-winged) (4 pcs 4-winged)

COMBINED TERMINAL BLOCK

WASHER (8 pcs 2-winged) (16 pcs 4-winged)

HANGING BRACE MEDIUM (2pcs 2-winged) (FOR DOOR LEAF UNDER 4CM)

(4 pcs 4-winged)











ACTIVE BRACE

PASSIVE BRACE Only for 4-winged Only for 4-winged

BELT BRACE

BELT FIXER-2 PCS

BELT ROLLER












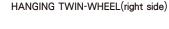

Inside door-leaf





Outside door-leaf (1set 2-winged) HANGING TWIN-WHEEL (2set 4-winged) For door thickness over than 40 mm





SENSORS

(OPTIONAL DEVICE)



Hanging Brace (4pcs 2-winged) (8pcs 4-winged)



Outside door-leaf (1set 2-winged) HANGING TWIN-WHEEL (2set 4-winged) For door thickness less than 40 mm



PROBLEMS	REASONABLE	CHECK	HOW TO SOLVE
DOOR CAN'T BE MOVED.	1.No power.	Broken circuit.	Check the broken circuit position.
		The Power Switch is not opened.	Open the POWER SWITCH.
	2.The door is locked.	Door is locked and no movement action.	Open the DOOR LOCK.
	3.The sensor is broken.	Signal light is WORKING.	Check the MICRO-CONTROLLER.
		Signal light is OUT OF WORKING.	Check the CIRCUIT OF SENSOR or change a new one SENSOR.
SPEED	1.Speed is too slow.	Check the Speed at KNOB of MICRO-CONTROLLER.	Adjust the Speed of Open/Closed Door.
	2.Door runs into the obstructor, then cause the Door moving slow.	Installation problem or dirty.	Reinstall or clean the ALUMINUM PROFILE.
	3.Door is difficult to move.	Turn off the power. Use hand to move the Door, besides, check the Ground Guide Rail whether it is dirty.	Clean the Ground Guide Rail.
		Check the HANGING TWIN-WHEEL whether it is broken.	Change a new one.
		Check the Door Bolt in the door bottom whether it is loosen.	Fix the Door Bolt.
		Check whether the Ground Wheel is broken.	Change a new Ground wheel.
DOOR CAN'T FULL OPEN.	In the Half-Open way.	Check the Knob/Switch.	Turn on to Full Open.
DOOR CAN'T CLOSE.	1.In the Full-Open way.	The SENSOR keeps working.	Check wiring or change a new SENSOR.
	2. The Door opens suddenly while it is moving to close.	The SENSOR probably is installed with something wrong.	Adjust the SENSOR or change a new one.

TROUBLESHOOTING



1.Turn off power. 2.Use your hand to move the Door-Leaf. Running isn't Smooth Preliminary analysis Running smooth Check the circuit 1.Turn on power. 2.Take out the sensor signal line. 3.Test the circuit of SENSOR. Running smooth Running check Running isn't Smooth The PROBLEM of the MOTOR 1. Wiring connects fault.

2. Spare parts of the MICRO-CONTROLLER broken.

- 1. Check the distance between Door and Wall / Crossbeam.
- 2. HANGING TWIN-WHEEL is broken.

Z Z

- 3. The GROUND RAIL is dirty.
- 4. The Door-Leaf becomes deformed.
- 5. Check BLOCK SCREW whether need to adjust.
- 6. The GROUND GUIDE WHEEL is damaged.
- 7. Check the LOCK whether it is broken.
- 8. Check the ALUMINUM COVER whether it isn't fixed.
- 9. There is dirt inside the ALUMINUM PROFILE.

The PROBLEM of the SENSOR

- 1. Check the SENSOR whether it is broken.
- 2. Check the SENSOR whether the wire is broken or short circuit.

M0DEL	Telescopic 2-winged	Telescopic 4-winged			
DOOR WEIGHT	130kg X2(door)	90kg X4(door)			
DOOR WIDTH	DW=500mm~3000mm	DW=500mm~3000mm			
INSTALL WAY	Surface install	Surface install			
MOTOR	DC24V 75W WORM GEAR MOTOR				
CONTROL	USER-FRINEDLY MICRO-CONTROLLER				
POWER CONSUMPTION	75W				
VOLTAGE	AC100V~240V				
ENVIRONMENTAL TEMPERATURE	-20°C~+50°C				
VOLUME	60decibel(max.)				
STARTING SPEED	650mm(second)	600mm(second)			
STARTING TIME	0~64 sec. (regulable)				
TRANSMISSION IMPORTANT CONDITION	RACK BELT S8M				
OPENING DOOR RANGE	FULL/HALF-OPEN (regulable)				
PFC POWER EFFICIENCY	0.95(in AC100V Full load)				
TRACTION FORCE	3 kg				



Door thickness over 40 mm

67

ALUMINUM PROFILE

134

MICRO-CONTROLLER

Door thickness less than 40 mm

MICRO-CONTROLLER

134

67

ALUMINUM PROFILE

INSIDER LAYER DOORFRAME

HANGING TWIN-WHEEL

260

OUTSIDER LAYER DOORFRAME

MEASURE: mm

HANGING TWIN-WHEEL

INSIDER LAYER DOORFRAME

HANGING TWIN-WHEEL

The slowing speed of the door

Adjust the SLOW SPEED. Higher number, faster speed. CAUTION: please adjust the number one by one from 1 oW to 1 igh.

F Opening hold time

Adjust the HOLD OPEN TIME. Higher number, the hold time is longer.

NUMBER	0	1	2	3	4	5	6	7	8	9
SECOND	0	1	2	3	4	5	6	10	32	64



DIP Switch

Slowing Range of Opening

☐ Short ☐ Long

2 Slowing range of closing

Short Long

3 4 Open incomplete

Long Short 6 Directional function

OFF ON

OFF: Normal mode.

ON: Push once, open the door. Push again, close the door.

7 Electric lock switch

Fail Safe Fail Secure

8 Standby

5 Reverse Switch:

in order to control opening and closing direction of the Door-Leaf after power resumes.

OFF ON

OFF: Normal mode, after power resumes, the Door-Leaf opens the door first.

ON: suitable for Security System, after power resumes the Door-Leaf closes the door

first.





OUTSIDER LAYER DOORFRAME HANGING TWIN-WHEEL

280

S S

The Slowing Range of Opening and Closing Door is controlled by "Fingered Switch". There are two kinds of choice: SHORT and LONG range. (The setting of production is SHORT range).

When USER regulates the Speed the Range and the Brake; it will start to accord what USER sets after twice running.




The Door-Leaf is slight, the BRAKE POWER is less. Please choose 0~2 if the Door-Leaf is under 50kg. Please adjust number from number 5 if the Door-Leaf is over 80kg.

The opening speed of the door

Adjust the OPEN SPEED. Higher number, faster speed. CAUTION: please adjust the number one by one from low to high.

The closing speed of the door

Adjust the CLOSED SPEED. Higher number, faster speed. CAUTION: please adjust the number one by one from low to high.

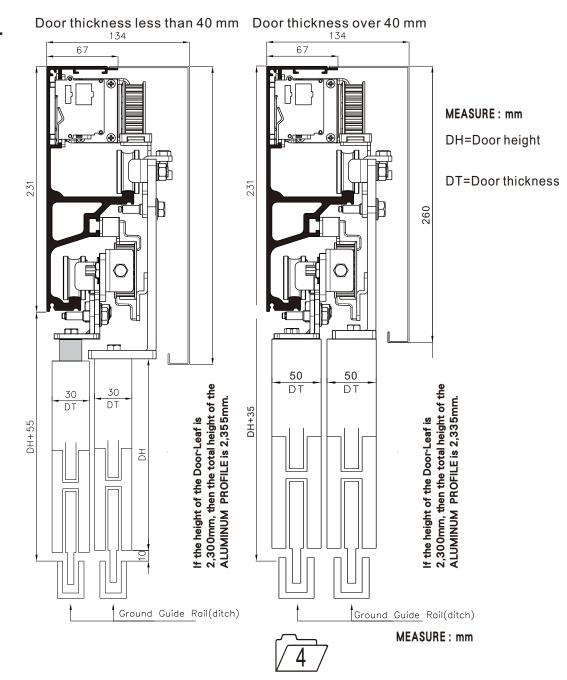



5 / INSTALL PROCEDURE

R S

TEST AND ADJUST

Z S

Before turn on the power, make sure the Door-Leaf can be smoothly moved, and the electric link is correct at first.

1.SYSTEM PROGRAM REMEMBER

After turn on the power, the MICRO-CONTROLLER will remember the distance and the range.

2.ADJUST

The FACEPLATE of MICRO-CONTROLLER



Red LED-Power is connected.

Green LED-Input the open door signal.

L/R switch-The direction of the door opening: right/lift(R/L).



2 Cut and install the ALUMINUM PROFILE



3 Install the SENSORS



4 MOTOR



5 MICRO-CONTROLLER

6 Install the BELT ROLLER



Hang and adjust the Door-Leaf




8 Install and adjust the BELT



9 Power connect




10 Test and adjust

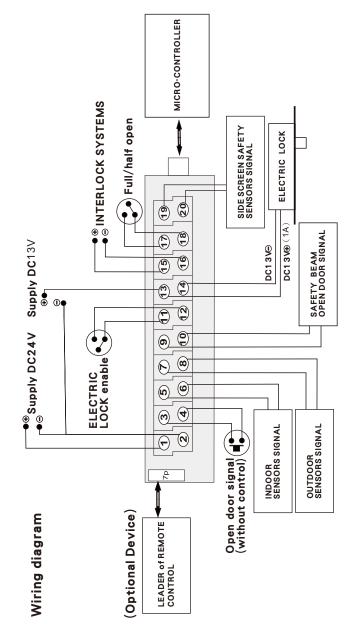


., then ® and ® will output DC13V for ® are not short circuit. (A) The FUNCTION of the ELECTRIC LOCK will work when (Band (Bare short circuit ELECTRIC LOCK after the door closes. (Band (Bwill not output DC13V if (Band (Band))

The SIGNAL of the SAFETY BEAM is controlled by ⑤ and ⑩ . When door is opening the signal, then the SAFETY BEAM will be working. ⑥ and⑪ will not work when the BEAM will lose efficacy when the door is closed.


(C) The signal of Side Screen Safety Sensor is controlled by ® and ®. Side Screen Safety Sensors are placed at the rear end of the door to prevent collisions during the opening movement of the moving leaves. When the signal activates, the moving leaves will become slowly, till the door opens fully, then close normally.

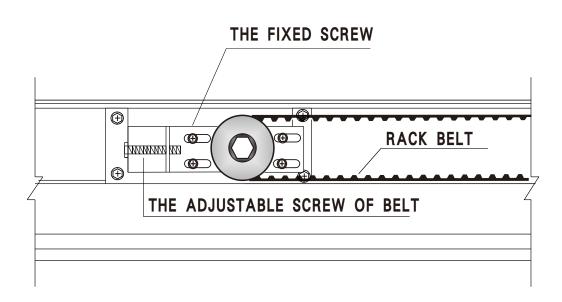


TENSION of BELT can be adjusted by the ADJUSTABLE SCREW of BELT, after that, must tighten the FIXED SCREW of BELT.

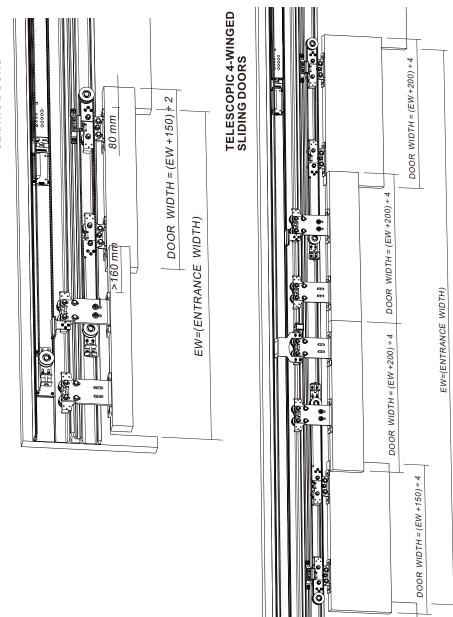


MICRO-CONTROLLER

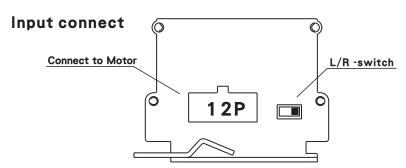


Output connect

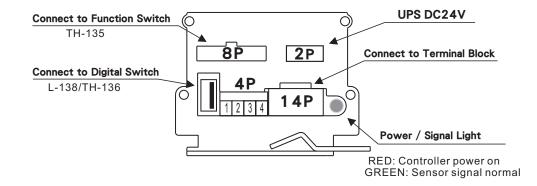

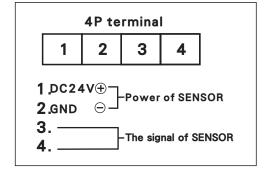




The ILLUSTRATED of CONTROLLER and MOTOR.

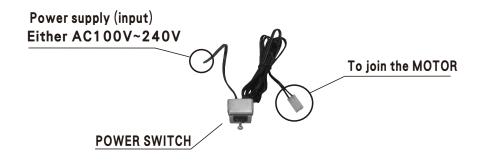





Please confirm WHETHER the SENSOR VOLTAGE is the same as the power supply. If different between them, need to add the TRANSFORMER, otherwise the SENSOR would be burned.

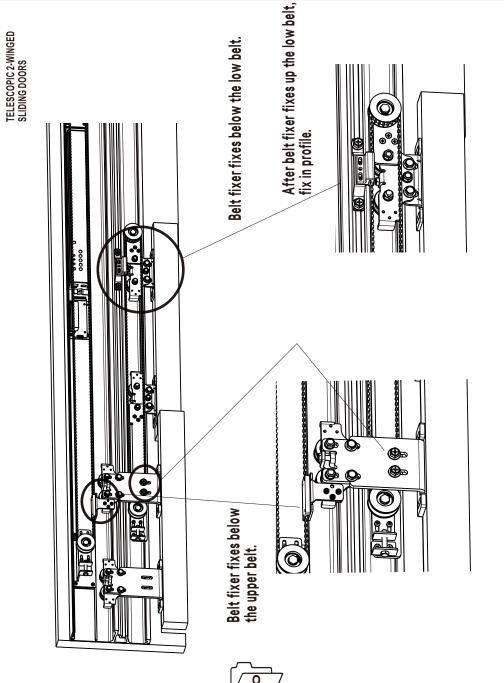

R S

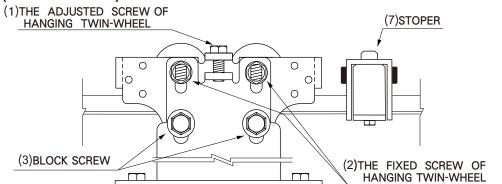

(Inside door) HANGING TWIN-WHEEL

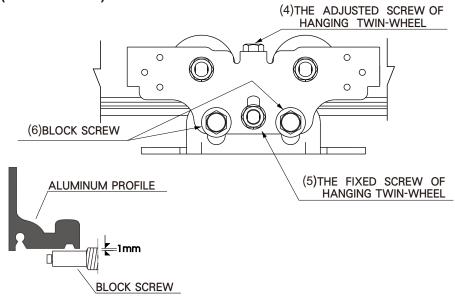

- When Outside/Inside door height and interval need to adjust, loose (3)/(6) at first, then adust (1)/(4).
- (3)/Inside door(6) after adjust (4).
- Then, install (7) after make sure the DOOR OPEN POSITION.

